
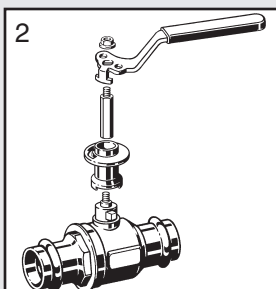


## Product Instructions

### Stem Extension for Lockable Metal Handle

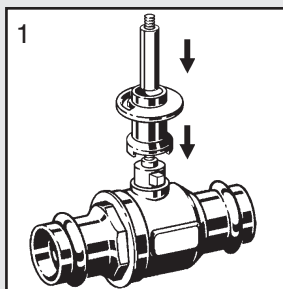

1. Turn stem nut in counterclockwise direction while holding on to valve handle. Remove stem nut, handle and handle washer from stem.
2. Install extended handle assembly on valve by aligning bottom opening with the valve stem.
3. Insert valve stem extender into extended handle assembly. Tighten valve stem extender onto existing stem by turning the extender in a clockwise direction. Do not apply a wrench to the valve stem extender, hand tighten only.
4. Align the handle with the stem extender and insert handle stop into semi-circular slot in the top of the handle extender.
5. Tighten handle nut onto stem extender by rotating in a clockwise direction. Do not over-tighten. (The handle nut is meant to secure the handle to the stem. It is not used to adjust the stem seals.)

Note: Handle washer supplied with lockable metal handle should be discarded and not installed with the stem extension.

**VIEGA...The global leader in plumbing and heating systems.**

301 N. Main, 9th Floor • Wichita, KS 67202 • Ph: 800-976-9819 • Fax: 800-976-9817 • E-Mail: [service@viega.com](mailto:service@viega.com) • [www.viega.com](http://www.viega.com)