
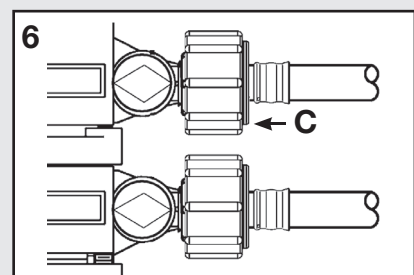
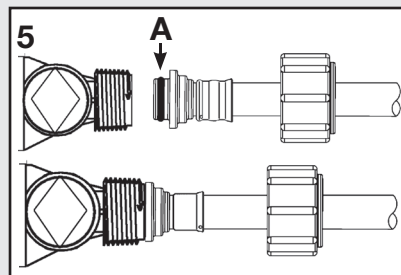
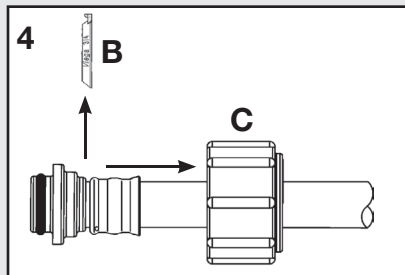
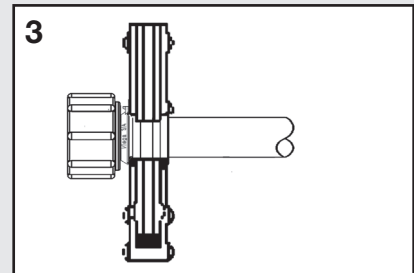
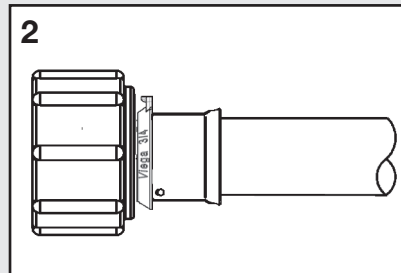


Product Instructions

MANABLOC[®] Zero Lead PEX Press Port Adapters

THE WATER SUPPLY TO THE MANABLOC AND THE PORT VALVES SHALL BE TURNED OFF BEFORE ATTEMPTING INSTALLATION OF PRESS ADAPTERS.

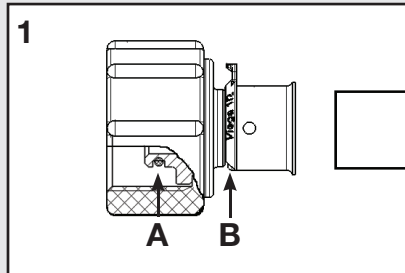

1. Ensure sealing element (A) is in place and the tool locator ring (B) is present in its factory installed position.
2. Square off tubing to proper length and insert the fitting fully into the end of the tubing as shown.
3. Placing the PEX Press tool jaw over the attached press sleeve resting it against the tool locator ring, check for full tubing insertion at the view holes then press the sleeve with an appropriately sized press jaw.
DO NOT PRESS TWICE. Refer to current PureFlow installation guide for additional pressing information.
4. Remove tool locator ring (B) and slide swivel nut (C) over tubing as shown.
5. Ensure sealing element (A) is in place and clean of any dirt or debris, wet sealing element with tap water. Insert the fitting into the desired port until the fitting flange sets flush with the end of the port.
6. Thread the swivel nut (C) onto the MANABLOC port. Hand tighten only. Open the port valve(s) before turning on the main water supply.

NOTE: "Zero Lead" identifies Viega products meeting the lead free requirements of California and Vermont law, effective January 1, 2010, as tested and listed against NSF- 61, Annex G

Viega...The global leader in plumbing and heating systems.

301 N. Main, 9th Floor • Wichita, KS 67202 • Ph: 800-976-9819 • Fax: 800-976-9817 • E-Mail: service@viega.com • www.viega.com