


Product Instructions

viEGA

ViegaPEX[®] Repair Coupling Wrap

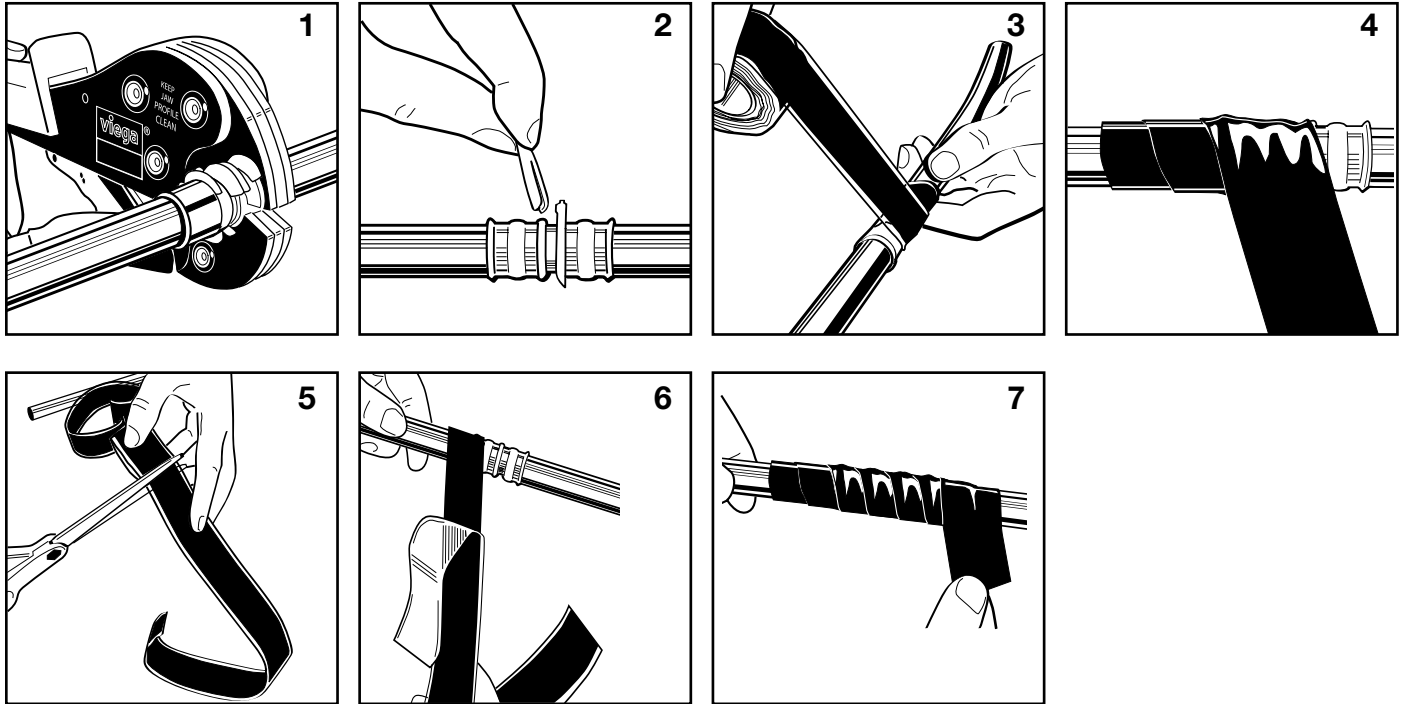

1. Press fitting as per Viega's PEX Press Product Instructions.
 2. Remove Tool Locator Rings to ensure a proper seal.
 3. Leaving protective film in place, measure amount of tape required for sealing fitting by wrapping fitting completely.
 4. Overlap by 1/2" - 1" to ensure proper seal
 5. Cut required length of tape.
 6. Carefully wrap fitting with tape, removing protective film as fitting is wrapped.
 7. Completely cover fitting. The silicone will bond within 2 minutes and create a permanent bond within 24 hours.
- NOTE: Concrete pour will not affect sealant's bonding process.

Viega... The global leader in plumbing and heating systems.

301 N. Main, 9th Floor • Wichita, KS 67202 • Ph: 800-976-9819 • Fax: 800-976-9817 • E-Mail: insidesales@viEGA.com • www.viEGA.com

PI-PR-741521 0511 (Repair Coupling Wrap)