


# Product Instructions


viEGA

## Installing the Viega Manifold Cabinet Lock


1. Remove the door from the cabinet.
2. Place the door face down on a flat surface.
3. Locate the retaining wedge on the back side of the knob.
4. Insert the blade of a small screwdriver under the lip of the retaining wedge and pry the wedge out. See Figure 1.

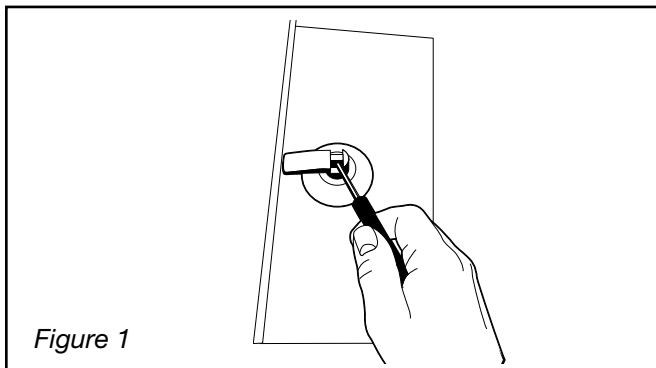


5. Stand the door upright.
6. With a small pair of pliers squeeze the two triangular tabs together while simultaneously pushing the back of the knob out the front of the cabinet door.
7. Slide the lock cylinder through the front of the door. See Figure 2.

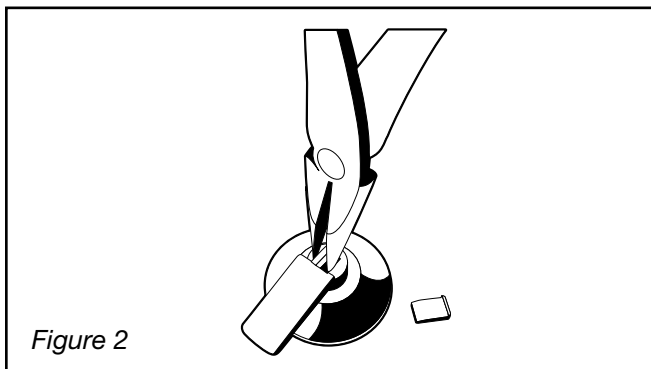

8. Be sure to position the lock in the upright position and attach the plastic nut on the back side of the lock cylinder. See Figure 3.

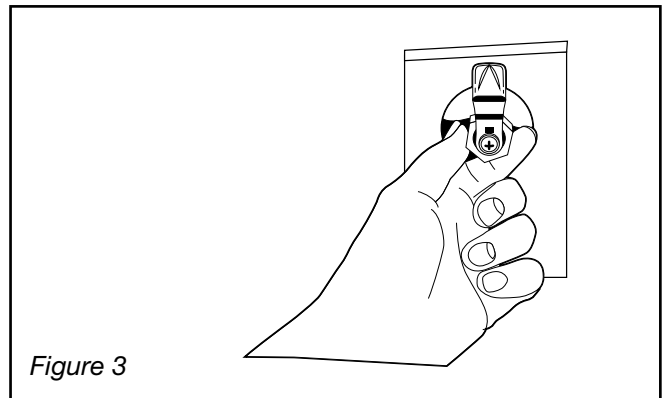

9. Using a pair of pliers lightly tighten the plastic nut.
10. The lock installation is now complete and will lock and unlock with the use of the keys provided.

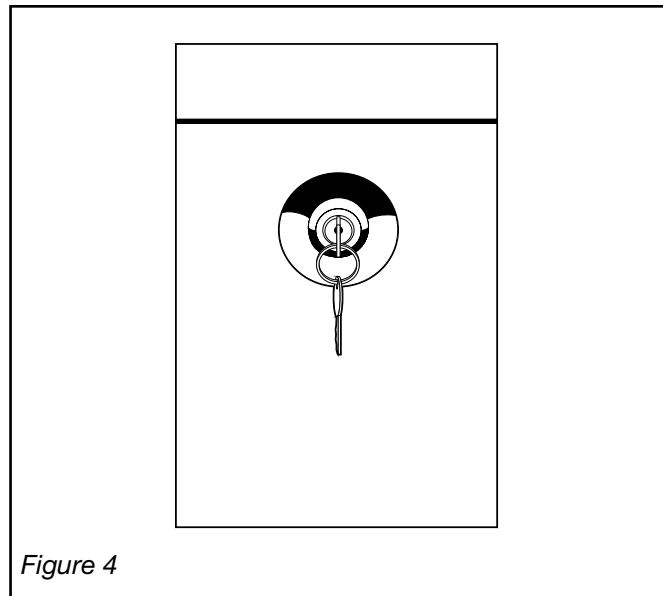

Note: Manifold cabinet stock code #15802 requires 2 lock sets be used.

**Viega... The global leader in plumbing, heating and pipe joining systems**

301 N. Main, 9th Floor • Wichita, KS 67202 • Ph: 800-976-9819 • Fax: 316-425-7618 • [www.viega.com](http://www.viega.com)

©2011, ProPress®, FostaPEX®, Seapress®, MegaPress®, MegaPressG® and Viega® are registered trademarks of Viega GmbH & Co. PureFlow®, Smart Connect®, Climate Panel®, Climate Mat®, Climate Trak®, MANABLOC®, Radiant Wizard®, S-no-Ice®, Snap Panel®, XL® and XL-C® are registered trademarks of Viega LLC. MiniBloc™, ProRadiant™, PolyAlloy™, SmartLoop™ and Zero Lead™ are trademarks of Viega LLC; GeoFusion™, ProPressG™ and ViegaPEX™ are trademarks of Viega GmbH & Co. KG.

PI-PR-561062 1011 (Manifold Cabinet Lock)